



X



INTERIORS
WORLD

web : www.interiorsworlds.com



Super
Heavy
P V C P a n e l s



Borer & Termite
Resistant



100% Water
Resistant



Seamless & Ready
To Use



Quick
Installation



INTERIORS
WORLD
web : www.interiorsworlds.com

X



2003



2004

Size:- 10 Inch x 10 Feet
Thickness:- 6mm



Borer & Termite
Resistant



100% Water
Resistant



Seamless & Ready
To Use



Quick
Installation




INTERIORS
WORLD
web : www.interiorsworlds.com

X



2012

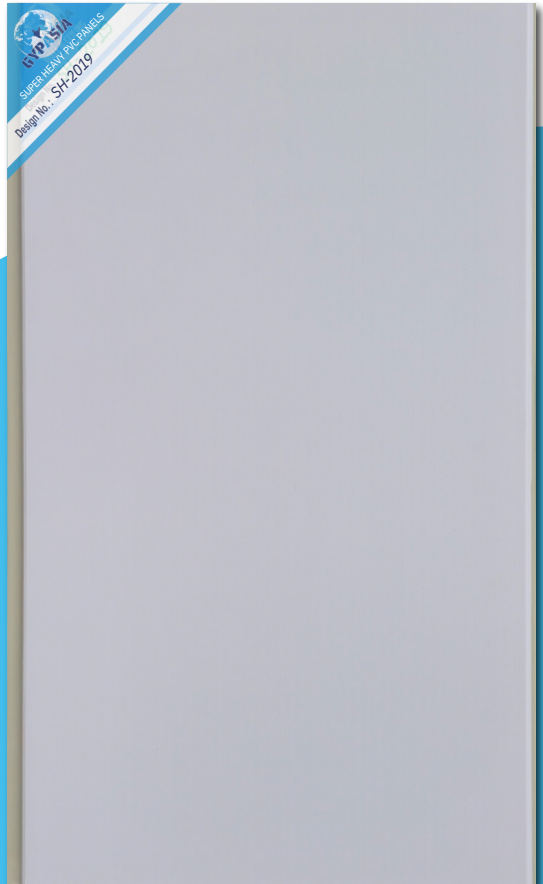

2019

Size:- 10 Inch x 10 Feet
Thickness:- 6mm



Borer & Termite
Resistant



100% Water
Resistant



Seamless & Ready
To Use



Quick
Installation



INTERIORS
WORLD
web : www.interiorsworlds.com

X



2044



2053

Size:- 10 Inch x 10 Feet
Thickness:- 6mm



Borer & Termite
Resistant



100% Water
Resistant



Seamless & Ready
To Use



Quick
Installation




INTERIORS
WORLD
web : www.interiorsworlds.com

X



2054

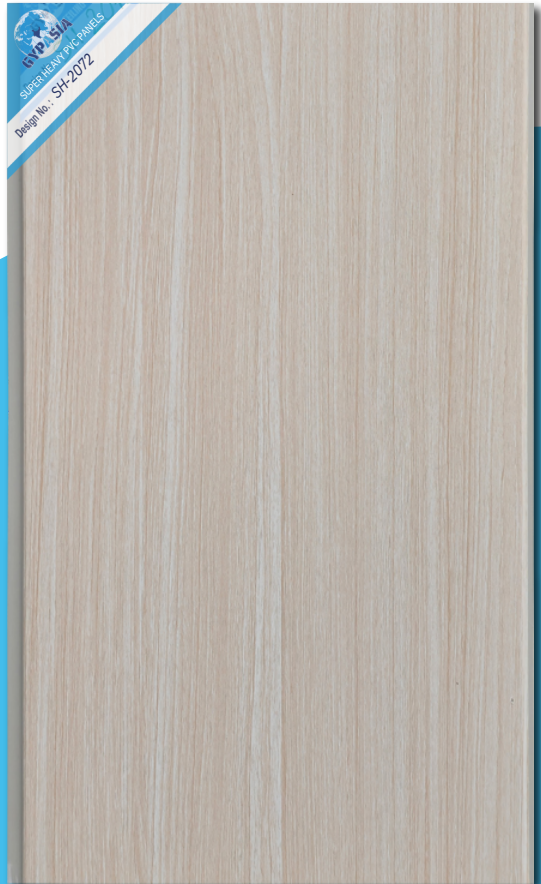

2072

Size:- 10 Inch x 10 Feet
Thickness:- 6mm



Borer & Termite
Resistant



100% Water
Resistant



Seamless & Ready
To Use



Quick
Installation




INTERIORS
WORLD
web : www.interiorsworlds.com

X



2091

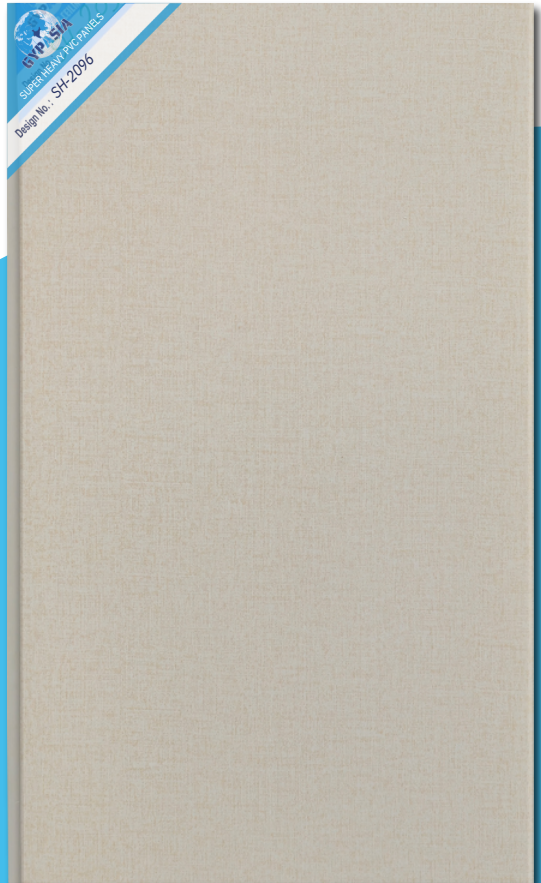

2096

Size:- 10 Inch x 10 Feet
Thickness:- 6mm



Borer & Termite
Resistant



100% Water
Resistant



Seamless & Ready
To Use




Quick
Installation



INTERIORS
WORLD
web : www.interiorsworlds.com

X

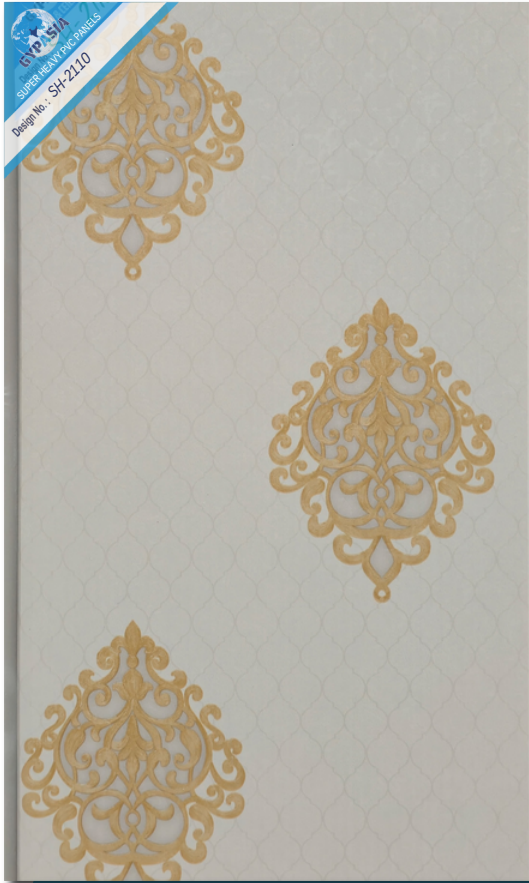

2110



2112

Size:- 10 Inch x 10 Feet
Thickness:- 6mm



Borer & Termite
Resistant



100% Water
Resistant



Seamless & Ready
To Use




Quick
Installation



INTERIORS
WORLD
web : www.interiorsworlds.com

X

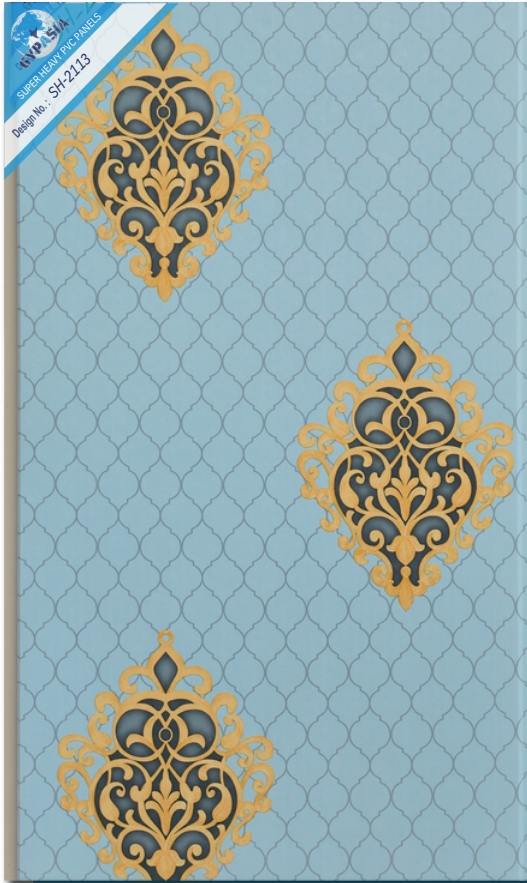

2113



2118

Size:- 10 Inch x 10 Feet
Thickness:- 6mm



Borer & Termite
Resistant



100% Water
Resistant



Seamless & Ready
To Use



Quick
Installation



INTERIORS
WORLD
web : www.interiorsworlds.com

X



2119



2133

Size:- 10 Inch x 10 Feet
Thickness:- 6mm